


Attaching battery pack.


1. Attach battery box onto post bolts. Loosen these 2 bolts so as to allow the battery flanges to hook on and seat properly onto bolts.

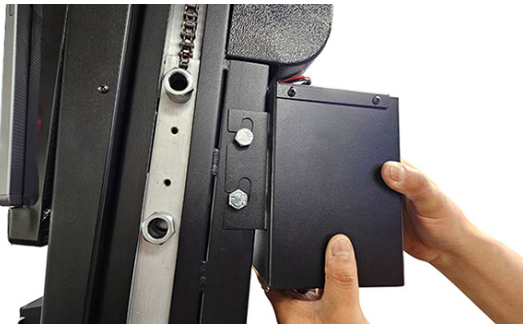


2. Plug small battery cord into power port located on back of post, as seen here.



On and Off switch / Power charging light.

3.  The switch on the battery must be in the "ON" position (blue LED ON) for charging to occur.

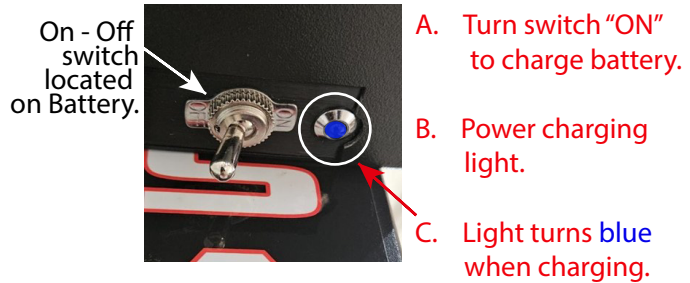


4. Using wall outlet power source, and not the battery power, you can also power the machine by:

1. Plugging the cable into the base of climber.
2. The battery MUST be on attached, plugged in.
3. Battery switched "ON".
4. Blue light indicator luminesces when charging.

Fully Charged Status Indicator

There are four green LEDs on the charger. When all four LEDs remain on constantly, the battery is fully charged. When fully discharged the LEDs sequentially blink from bottom to top. As the battery charge level increases, the lower voltage LEDs will remain ON constantly.

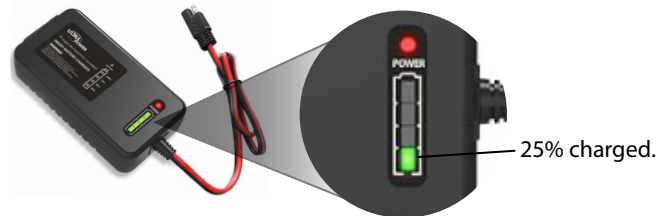

The electronics/software constantly monitor battery level. When the battery needs charging the LED pixelring's (resistance level indicator) lower three LEDs will turn red. At this point you will have

approximately thirty minutes of battery time still available (usually enough to complete a workout).



NOTE:


First 3 LEDs turn RED when battery is low.






NOTE:

There are only 3 power configurations that may be used when powering / charging the VersaClimber:

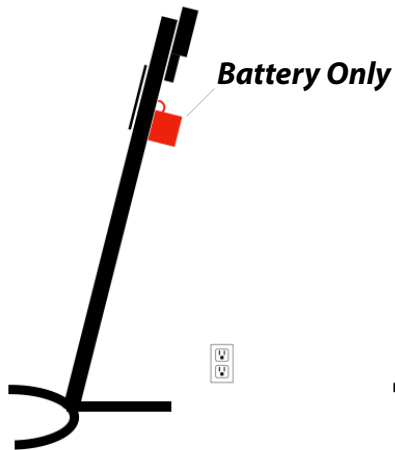


Battery Only

- Battery mounted on climber
- Battery plugged into climber
- Power switched ON (Blue light)

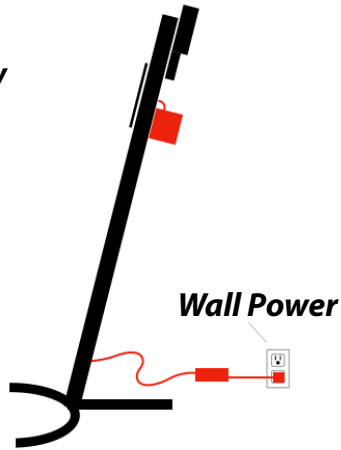

Wall Power & Charging Battery
(Climber will work while charging)

- Battery mounted on climber
- Battery plugged into climber
- Power switched ON (Blue light)
- Charging cable connected to base

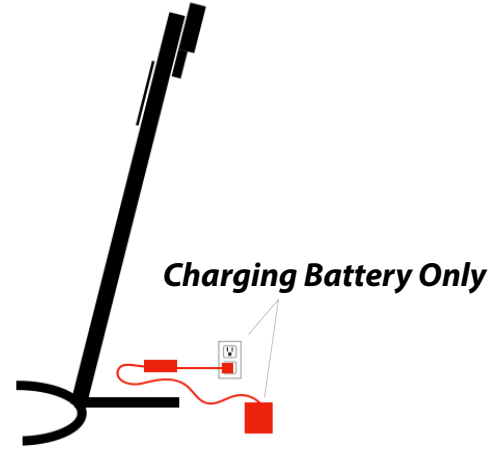

Charging Battery
(Climber will not work while charging)

- Disconnect the battery from post
- Remove battery
- Charge battery at location of your choosing





FAQs

HOW LONG DOES THE BATTERY LAST ON THE SM-M?

For about 13.5 hours of continuous use. The machine goes into sleep mode after 5-minutes and the battery will last considerably longer when large amounts of idle time exist between workouts.

You can charge it with either method. For on-post charging, simply plug the charger into the barrel connector on the post. (Ensure the battery switch is ON.) If you prefer to remove batteries and charge them in a central location, you can remove the battery and charge at the desired location. (Ensure the battery switch is ON.)

HOW DO I CHARGE THE BATTERY?

Simply plug the charger into the DC barrel plug located on the backside of the post towards the bottom. The switch on the battery must be in the ON position (blue LED ON) for charging to occur.

DO I HAVE TO REMOVE THE BATTERY TO CHARGE IT OR CAN I PLUG IN THE VERSACLIMBER TO CHARGE IT?

No. Simply plug the charger into the barrel connector on the post. Although, you can remove the battery and charge it in a remote location if that is desirable.

HOW DO I KNOW WHEN THE BATTERY IS GETTING LOW?

The electronics/software constantly monitor battery level. When the battery needs charging the LED pixelring's (resistance level indicator) lower three LEDs will turn red. At this point you will have approximately thirty minutes of battery time still available (usually enough to complete a workout).

HOW LONG DOES IT TAKE TO CHARGE THE BATTERY?

Depends how far discharged it is. Fully discharged to full charge is about 10-16 hours.

HOW DO I KNOW WHEN THE BATTERY IS FULLY CHARGED?

There are four green LEDs on the charger. When all four LEDs remain on constantly, the battery is fully charged. When fully discharged the LEDs sequentially blink from bottom to top. As the battery charge level increases, the lower voltage LEDs will remain ON constantly.

I PLUGGED IN THE BATTERY BUT IT'S NOT CHARGING. WHAT DO I DO?

There are fault conditions the charger will indicate via the LEDs or please contact us: support@versaclimber.com or call 800.237.2271 / 714.850.9716

The switch on the battery must be in the ON position (BLUE LED ON) for charging to occur.

The charger can remain plugged in all the time and will not hurt anything. It will automatically turn OFF when the battery is fully charged. Again, the switch on the battery must be in the ON position (blue LED lit) for charging to occur.

CAN I DISCONNECT BATTERY POWER AND PLUG INTO WALL OUTLET DIRECTLY?

No. If the battery is unplugged the charger must be disconnected as well. If you want to use the climber without the battery attached then you will need to call customer service and buy a different power adapter.

